
AMS PLUS - AMS CL PLUS - AMS CO PLUS

Self-venting version: AMSA PLUS
Viscous liquids: AMS PLUS LPV

PRODUCT LABEL

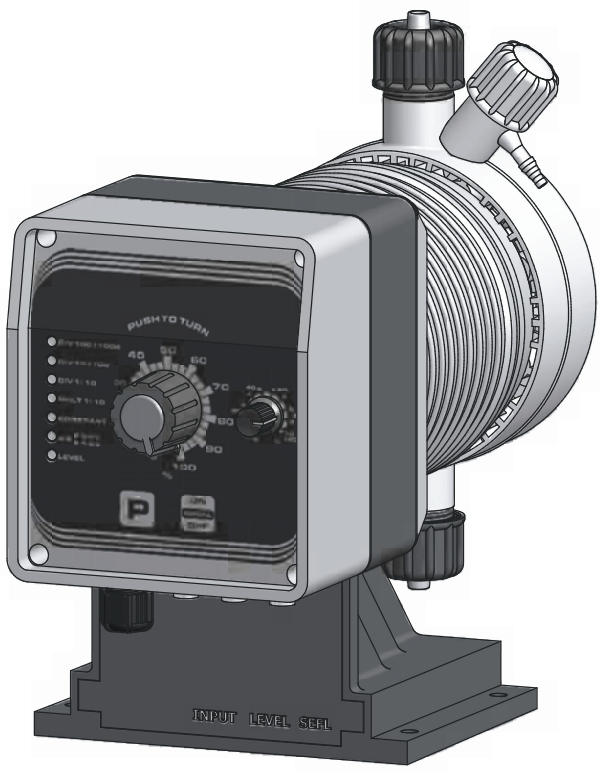

SOLENOID DRIVEN METERING PUMPS
WITH DIAPHRAGM

OPERATING MANUAL

EN

This operating instructions contains safety information that if ignored can endanger life or result in serious injury.

Read these instructions **carefully** before use and keep them for future reference. Original instruction.

Information and specifications on this manual could be uncorrect or could have printing errors. Specifications are subject to change without notice.

Version: R1-11-13

GENERAL SAFETY GUIDELINES

Operating, installing, or maintaining the unit in any way that is not covered in this manual could cause death, serious personal injury, or damage to the equipment.

ICON

This manual use the following safety message icon:

Danger!
Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

Warning!
Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

Important - A practice not related to personal injury or additional information.

Cross reference - An instance which refers to related information elsewhere in the same document

PURPOSE OF USE AND SAFETY

METERING PUMP IS INTENDED FOR CHEMICAL DOSING AND DRINKING WATER TREATMENT.

Do not use in explosive area (EX).
Do not use with flammable chemicals.
Do not use with radioactive chemicals.

Use after a proper installation.

Use the pump in accordance with the data and specifications printed on the label.

Do not modify or use in a manner inconsistent with the provisions of the operating manual.

Keep the pump protected from sun and water. Avoid water splashes.

In emergencies the pump should be switched off immediately. Disconnect the power cable from the power supply.

When using pump with aggressive chemicals observe the regulations concerning the transport and storage of aggressive fluids.

When installing always observe national regulations.

Manufacturer is not liable for any unauthorized use or misuse of this product that may cause injury, damage to persons or materials.

Pump must be accessible at all times for both operating and servicing. Access must not be obstructed in any way.

Feeder should be interlocked with a no-flow protection device.

Pump and accessories must be serviced and repaired by qualified and authorized personnel only.

Before any operation:
- **always read chemical Material Safety Data Sheet (MSDS);**
- **always wear protective clothing;**
- **always discharge the liquid end before servicing the pump.**
- **empty and rinse the liquid end before work on a pump which has been used with hazardous or unknown chemicals.**

This equipment requires regular maintenance to ensure potability requirements of the water and maintenance of improvements as declared by the manufaturer.

Feeder should be interlocked with a no-flow protection device to automatically shut-off the pumps when there is no flow!

Adequate measures shall be taken to prevent cross connection of chemicals!

Chemical feeding must be stopped during backwash cycles and periods of noflow as these conditions may introduce the potential for chemical overdosing. Not doing so may result in elevated chemical concentrations and hazerdous gas introduction into the pool or spa.

Environmental safety

Work area
Always keep the pump area clean to avoid and/or discover emissions.

Recycling guidelines


EWC code: 16 02 14

Always recycle according to these guidelines:
1. If the unit or parts are accepted by an authorized recycling company, then follow local recycling laws and regulations.
2. If the unit or parts are not accepted by an authorized recycling company, then return them to the nearest representative.

Waste and emissions regulations
Observe these safety regulations regarding waste and emissions:
- Dispose appropriately of all waste.
- Handle and dispose of the dosed chemical in compliance with applicable environmental regulations.
- Clean up all spills in accordance with safety and environmental procedures.
- Report all environmental emissions to the appropriate authorities.

LABEL

Fig. 1. Product label.

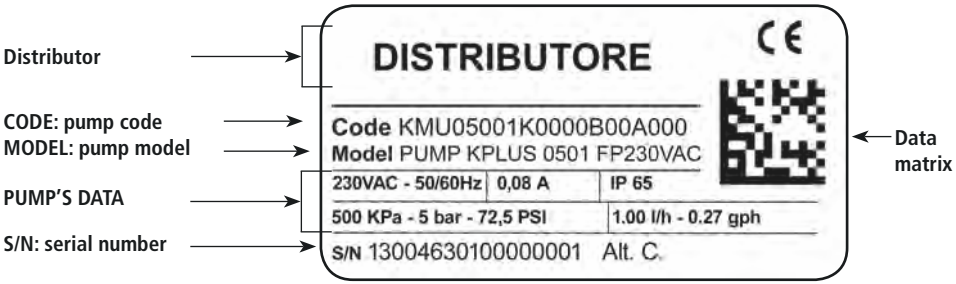

Spare parts

For spare parts orders or any other communication, refer to the pump's label.
Code (CODE) and serial number (S / N) uniquely identify the pump.

Transportation and storage

A not suitable transportation or storage can cause damages.

Use origianal box to pack the pump.

Observe storage conditions also for transportation.

Although packed, always protect the unit against humidity and the action of chemicals.

Before return the dosing pump to the manufacturer Repair service, drain the chemical from pump head and rinse it. Refer to Shutdown procedure.

Fill the PRODUCT SERVICE REPAIR FORM and send it with the dosing pump.
Repair service is not accepted if PRODUCT SERVICE REPAIR FORM is missing.

DO NOT TRASH PACKAGING. USE IT TO RETURN THE PUMP.

Transportation and storage temperature ..... 10-50°C (32-122°F)
Umidity ..... 95% relative humidity (not condensed)

Included into package

QUANTITY	CONTENT	**AMS PLUS**	**AMS CL PLUS**	**AMS CO PLUS**	**AMSA PLUS**	**AMSA CL PLUS**	**AMSA CO PLUS**	**AMS PLUS LPV**	**AMS CL PLUS LPV**	**AMS CO PLUS LPV**
n. 4	ø6 dibbles	●	●	●	●	●	●	●	●	●
n. 4	4,5 x 40 self tapping screws	●	●	●	●	●	●	●	●	●
n. 1	5 X 20 delayed fuse	●	●	●	●	●	●	●	●	●
n. 1	level probe with axial foot filter (PVDF)	●	●		●	●				
n. 1	0,3 bar injection valve (PVDF)r	● 1/2"	● 1/2"	● 1/2"	● 1/2"	● 1/2"	● 1/2"	● 3/4" SS BALLS	● 3/4" SS BALLS	● 3/4" SS BALLS
m 2	delivery hose	● PVDF	● PVDF	● PVDF	● PVDF	● PVDF	● PVDF	● PE	● PE	● PE
m 2	suction hose	● PE	● PE	● PE	● PE	● PE	● PE	● PVC	● PVC	● PVC
m 2	venting hose	● PVC	● PVC	● PVC	● PE	● PE	● PE			
m 0,3	priming hose / syringe							● PVC	● PVC	● PVC
m 2,5	external signal cable	●			●			●		
n.1	operating manual	●	●	●	●	●	●	●	●	●

DESCRIPTION

AMS PLUS

AMS PLUS is a constant or proportional dosing pump with level control for chemical feeding into water.

In **Constant** dosing mode pump doses a constant quantity regularly as configured by the user.
In **Proportional** dosing mode pump doses a quantity proportionally to an input signal, digital (voltage free contact) or current (mA).

Working modes available:
- constant
- constant with 1-10 pulses divider
- multiplier with 1-10 pulses divider
- divider with 1-10 pulses divider
- divider with 1-100 pulses divider
- divider with 1-1000 pulses divider
- mA current signal (0/4 mA = 0 pulses: 20mA = max pulses)

Flow rate is determined by the stroke length and by the stroke speed. The stroke length is adjustable from 0 to 100% using the stroke length adjustment knob. However dosing accuracy is guarantee within an adjustment range from 30% to 100%.

AMS CO PLUS

AMS CO PLUS works in **constant mode.**

The pump can be set to work in
- constant
- constant with 1-10 speed reducer.

AMS CL PLUS

AMS CL PLUS works in **constant mode and has got level control.**

The pump can be set to work in
- constant
- constant with 1-10 speed reducer.

Self venting: AMSA PLUS

AMSA is the AMS version with **self-venting pump head**.
Self-venting pump head must be used when using chemicals that produce gas (i.e. hydrogen peroxide, ammonium, sodium hypoclorite at particular conditions).
For connections **"Self-Venting pump head installation".**


Viscosity up to 8.000 cPs: AMS PLUS LPV

AMS PLUS LPV is the AMS version with PMMA pump head for **liquids with max viscosity 8.000 cPs.**
Funtioning mode is the same as AMS PLUS.
Flow may change according to viscosity. Flow rates indicated refer to a measure with water.
Liquid ends: 3/4" injection valve, 16x22 PVC suction hose and 8x12 PE injection hose.
Not included: Stainless steel foot filter with valve.

Compressed air: AMS AC PLUS

AMS AC is the AMS version with **double supply: compressed air and power supply.**
Compressed air without lubrifiant and/or condensed water.
Air supply pressure range must be from 6 to 10 bar.

Fig. 3. AMS PLUS - AMSA PLUS

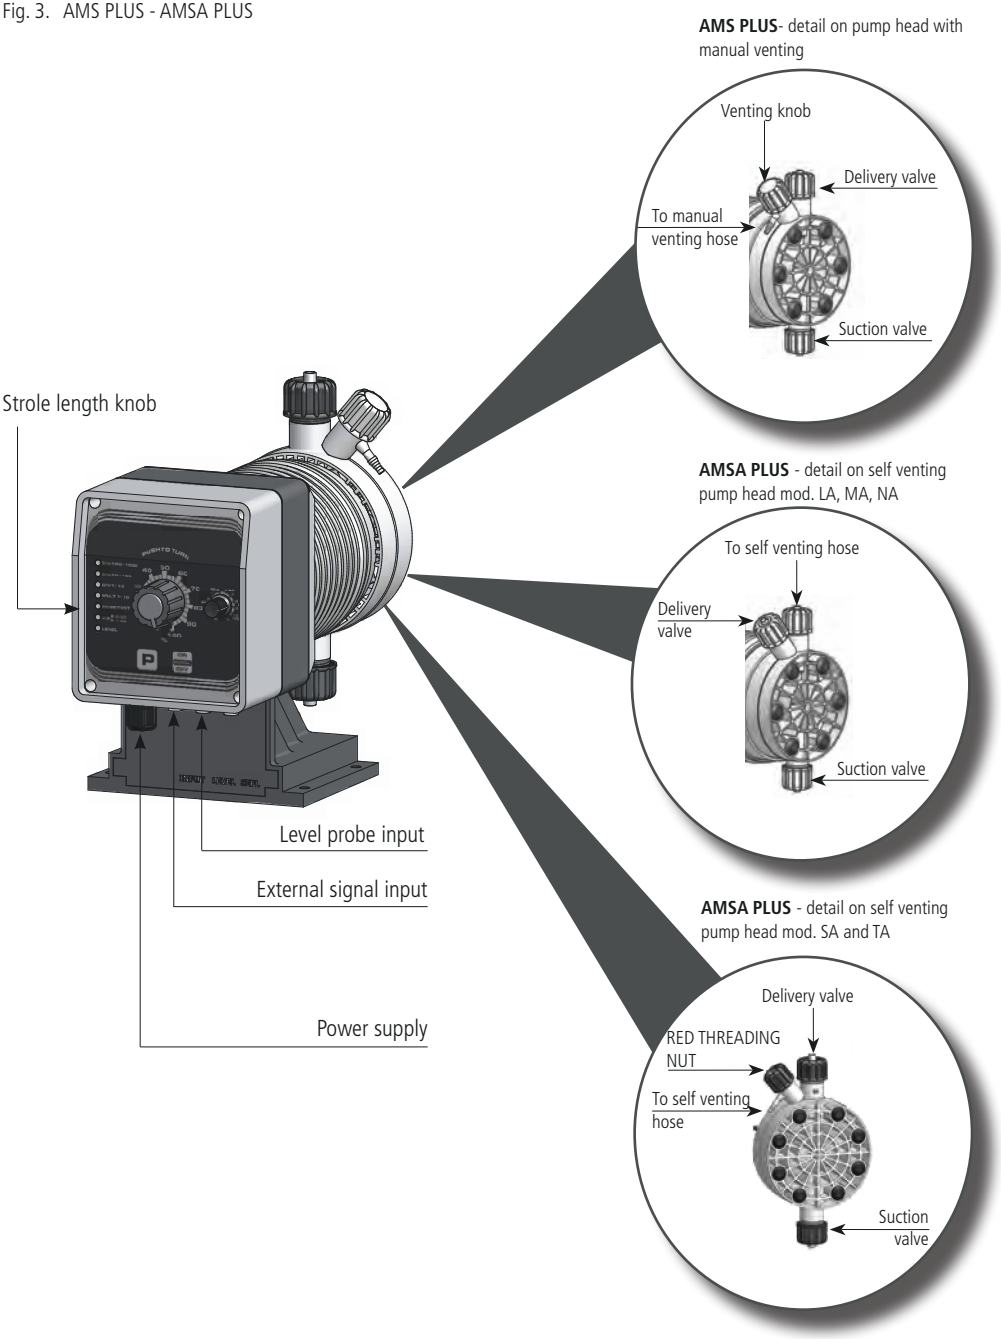

Features

Power Supply	Fuse
230 VAC (180-270 VAC) / 50-60Hz	1,25 A
115 VAC (90-135 VAC) / 50-60Hz	1,6 A
24 VAC (20-32 VAC) / 50-60Hz	6,3 A
12 VDC (10-16 VDC) / 50-60Hz	5 A

Environment temperature ..... 10-45°C (32-113°F)
Chemical temperature ..... 0-50°C (32-122°F)
Transportation and storage temperature ..... 10-50°C (32-122°F)
Installation class II
Audible noise 71dbA
Protection degree ..... IP 65
Working UR % ..... 85% at t ≤40 °C; 70% at 50 °C (no condensing water)
Dimensions 225x215x125mm
Max installation height ..... 1,5 m
Capacity ..... Table 1 and 2

Tab. 1. Capacity (manual and self venting models)

CAPACITY														
Mod. AMS PLUS AMS PLUS LPV[1]	Flow				cc per stroke [2]		pulse/ min	Max pressure		peak Amps (A)		Delivery hose (PVDF)	Suction hose	Pump head
	min cc/h	max l/h	Min GPH	Max GPH	min	max		bar	PSI	230 VAC	115 VAC			
2505	150	5	0,039	1.32	0,21	0.70	120	25	362	2.5	2.5	4 x 6	4x 6	L
1510	300	10	0,079	2.64	0,42	1.4	120	15	217	2.5	2.5	4 x 6	4 x 6	M
1015	450	15	0,118	3.96	0.62	2.08	120	10	217	2.5	2.5	6 x 8	6 x 8	M
0720	600	20	0,158	5.28	0,83	2.8	120	7	101	2.5	2.5	6 x 8	6 x 8	N
0340	1200	40	0,317	10.56	1,67	5.6	120	3	43	2.5	2.5	8 x 10	8 x 12	S
0260	1800	60	0,475	15.85	2,31	7,7	120	2	29	2.5	2.5	8 x 10	8 x 12	T
Mod. AMSA PLUS	Flow				cc per stroke [2]		pulse/ min	Max pressure		peak Amps (A)		Delivery hose (PVDF)	Suction hose	Pump head
	min cc/h	max l/h	Min GPH	Max GPH	min	max		bar	PSI	230 VAC	115 VAC			
253.2	96	3.2	0,025	0.85	0.13	0.44	120	25	362	2.5	2.5	4 x 6	4x 6	LA
1506	180	6	0,047	1.59	0.25	0.83	120	15	217	2.5	2.5	4 x 6	4 x 6	MA
1010	300	10	0,079	2.64	0.48	1.39	120	10	217	2.5	2.5	6 x 8	6 x 8	MA
0713	390	13	0,103	3.43	0.54	1.80	120	7	101	2.5	2.5	6 x 8	6 x 8	NA
0330	900	30	0,237	7.9	1,25	4,16	120	3	43	2.5	2.5	8 x 10	8 x 12	SA
0238,5	1155	38,5	0,305	10.1	1,6	5,34	120	2	29	2.5	2.5	8 x 10	8 x 12	TA

[1] Flow rates indicated refer to a measure with water. flow may change according to viscosity.
[2] cc per stroke: referred to cc/stroke with stroke length knob on 100%.

Tab. 2. Capacity (compressed air model)

CAPACITY											
Mod. AMS AC PLUS	Flow				cc per stroke *		Max pressure		Delivery hose (PVDF)	Suction hose	Pump head
	min cc/h	max l/h	Min GPH	Max GPH	min	max	bar	PSI			
1050	2.1	50	0,0005	13,2	2,1	7	10	145	8 x 10	8 x 12	N
05180	5.85	180	0,0015	47.6	7,5	25	5	73	13 x 16	12 x 18	T
00260	7.5	260	0,0019	68.7	10,8	36	0	0	13 x 16	12 x 18	T

*** cc per stroke:** referred to cc/stroke with stroke length knob on 100%.

Manual stroke length adjustment

Max cc/stroke (**Construction Materials and Technical info**) are referred to cc/stroke with stroke length knob on 100%.
The stroke length knob adjusts the pump capacity. Press and rotate the knob when the pump is powered.

Dosing accuracy is guarantee within an adjustment range from 30% to 100%.

Note:if knob isn't on 100% position then the pump will dose at pressure greater than the one declared on label.

Materials AMS PLUS AMSA PLUS

✓ : standard
✗: options available

	PVDF	PP	PPV0	PMMA	PVC	PE	CE	VETRO	PTFE	SS	FKM B	EPDM	WAX	SI
BOX		✓	✗											
PUMP HEAD	✓			✗										
DIAPHRAGM									✓					
BALLS							✓	✗	✗	✗				
SUCTION HOSE	✗				✓	✗								
DELIVERY HOSE	✓				✗	✗								
Venting hose	✗				✗	✓								
O RING									✗		✗	✗	✗	✗
LEVEL PROBE/ FOOT FILTER	✓													
LEVEL RPOBE CABLE						✓								

Materials AMS PLUS LPV

	PVDF	PP	PPV0	PMMA	PVC	PE	CE	VETRO	PTFE	SS	FKM B	EPDM	WAX	SI
BOX		✓	✗											
PUMP HEAD				✓										
DIAPHRAGM									✓					
BALLS										✓				
SUCTION HOSE					✓									
DELIVERY HOSE						✓								
PRIMING HOSE					✓									
O RING											✓	✗	✗	

INSTALLATION

How to install metering pump

5 steps to install and start-up the pump:

1. Pump location
2. Piping connections (hoses, level probe, injection valve)
3. Wirings
4. Pump priming
5. Programming and start-up

The operator must be aware of safety precautions to prevent physical injury.

User health and safety

POWER SUPPLY DISCONNECTION
Disconnect power supply before you perform any installation or maintenance tasks. Failure to disconnect power will result in serious physical injury.

SAFETY EQUIPMENT
Use safety equipment according to the company regulations. Use this safety equipment within the work area:
- **Helmet**
- **Safety goggles (with side shields)**
- **Protective shoes**
- **Protective gloves**
- **Gas mask**

The work area

THE WORK AREA
Observe these regulations and warnings in the work area:
- **Always keep the work area clean.**
- **Pay attention to the risks presented by gas and vapors in the work area.**
- **Avoid all electrical dangers. Pay attention to the risks of electric shock or arc flash hazards.**
- **Avoid water splashs and direct sun!**

Pump location

Pump must be installed on a stable support at a max **1,5 mt** height from tank's bottom.

Injection point must be higher than tank to avoid accidental chemical injection.

Otherwise, connect a **multifunction valve** on delivery pipeline.

INSTALLATION PUMP GUIDELINES
Install the pump
- in a safety place and fixed to the table / wall to avoid vibration problems;
- in an easy accessible place;
- in horizontal position.


Use only hoses compatibles with product to dose.
See "Chemical compatibility table" page 31.
If dosing product is not listed please consult full compatibility table or contact chemical's manufacturer.

Requirements for product positioning

REQUIREMENTS FOR PRODUCT POSITIONING
Only use fasteners of the proper size and material.
Replace all corroded fasteners.
Make sure that all fasteners are properly tightened and that there are no missing fasteners.

Fig. 4. Installation

1 - Dosing Pump
2 - Suction Hose
3 - Delivery Hose
4 - Injection Valve
5 - Air discharge
6 - Level Probe
7 - Foot Filter
8 - Power Cable

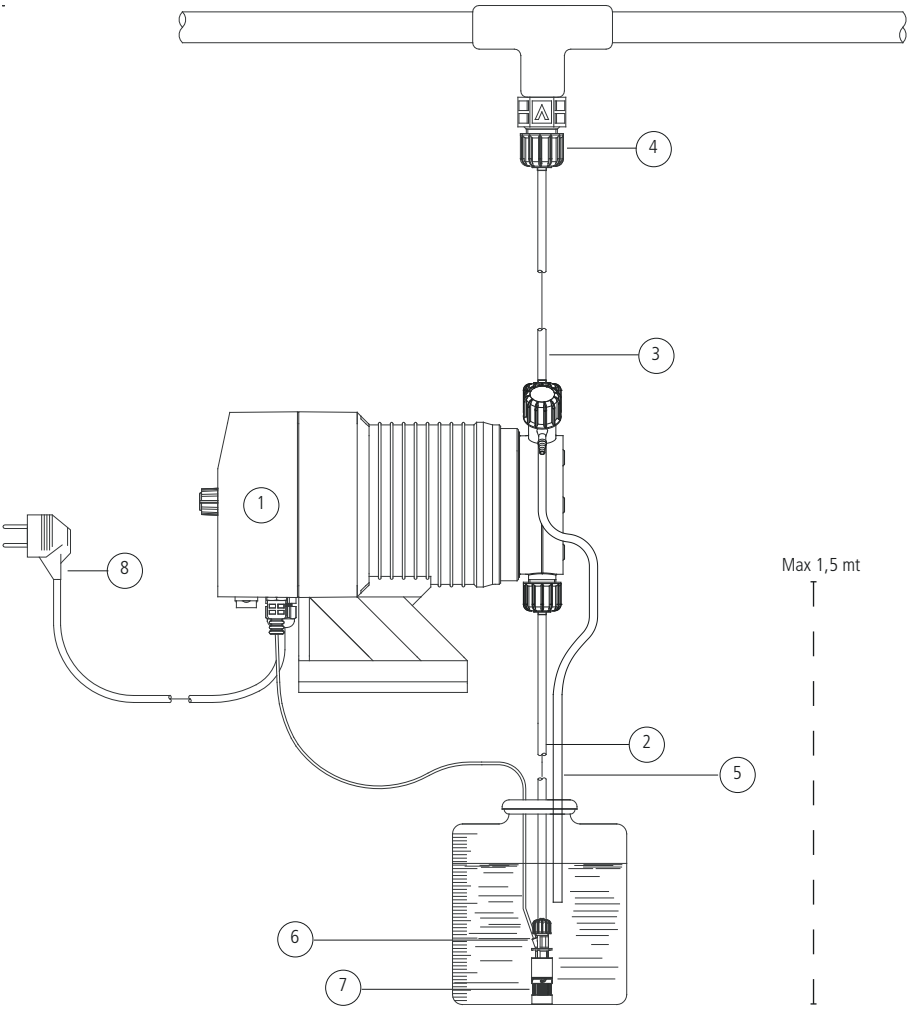

PIPING CONNECTIONS


Foot filter / Level probe (included only in some models)

Level probe is assembled with a foot filter that avoid sediments priming probles.
Install level probe on the bottom of the tank.
Connect BNC level probe to the pump BNC input.

Warning: If there is a mixer installed into tank, install a suction lance instead of level probe / foot filter.

In case of replacement of level probe parts, follow the diagram below.

Fig. 5. Level probe assembling diagram.

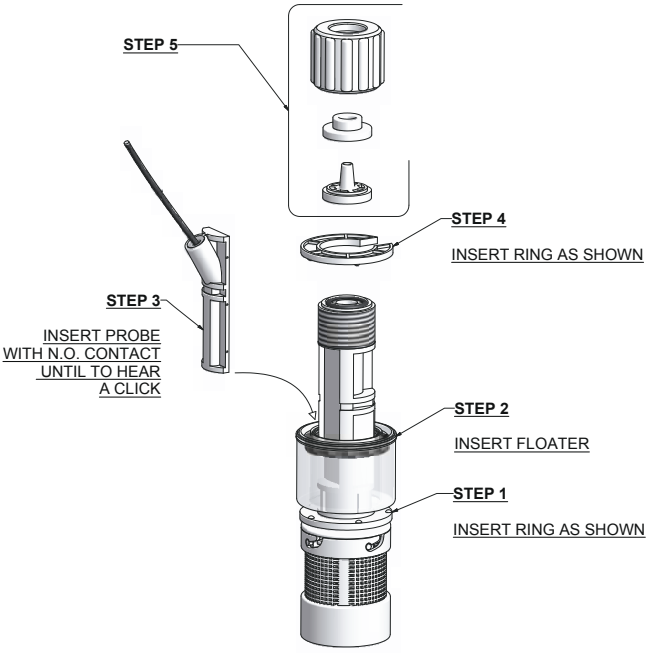


Suction hose connection

Suction piping should be as short as possible and installed in vertical position to avoid air bubbles suction.

Completely unscrew tightening nut from pump's head and remove assembling components: tightening nut, holding ring and pipe holder.
Assembly as shown in fig. 4.
Insert hose into pipe holder until it reaches the bottom. Lock hose on pump's head by screwing down the tightening nut.

Hand-tighten the nuts firmly.
Do not use tongs or any other tool.

Fig. 6. Suction hose assembling

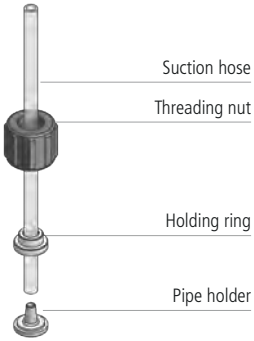

Pump head / delivery hose assembling procedure


Suction and delivery valves must be in vertical position.

Delivery hose must be firmly fixed to avoid suddenly movements that could damage near objects

Completely unscrew tightening nut from pump's head and remove assembling components: tightening nut, holding ring and pipe holder.
Assembly as shown in fig.5.
Insert hose into pipe holder until it reaches the bottom. Lock hose on pump's head by screwing down the tightening nut.

Hand-tighten the nuts firmly.
Do not use tongs or any other tool.
Connect the other end of the hose to the injection valve using the same procedure.

Fig. 7. Delivery hose / pump head assembling

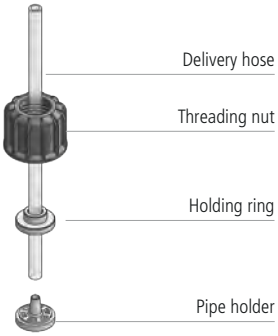

Injection valve


Injection valve must be installed on plant from water's input.
Injection valve will open at pressure greater than 0,3 bar.
On request 1, 2, 3, 4 or 5 bar injection valve are available.

Venting hose

Insert one side of venting hose into venting connector as shown in fig 8.

Insert other side of venting hose into product's tank.
During priming procedure product exceeding will flow into tank.

Fig. 8. Manual venting pump head model (AMS PLUS).

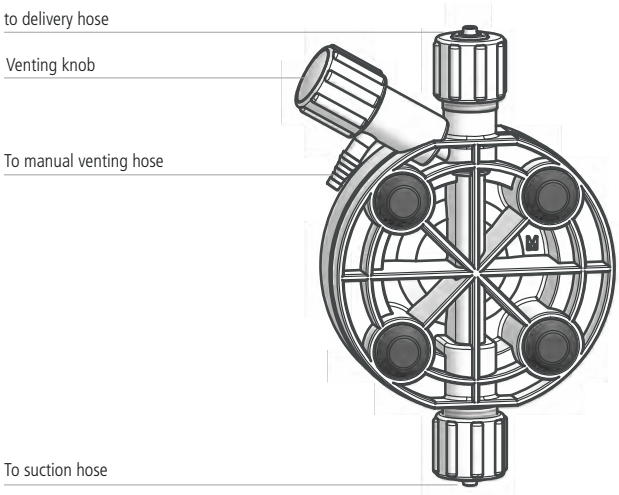

For priming procedure see **PRIMING**.

it's allowed to lightly bend venting hose.

During calibration procedure ("TEST") insert venting hose into BECKER test-tube.

AMSA PLUS self venting pump head connection

Refer to fig. 9 for delivery and venting hose.
Assembling procedures are the same described before.

Fig. 9. Self-venting models pump head: LA, MA, NA (AMSA PLUS).


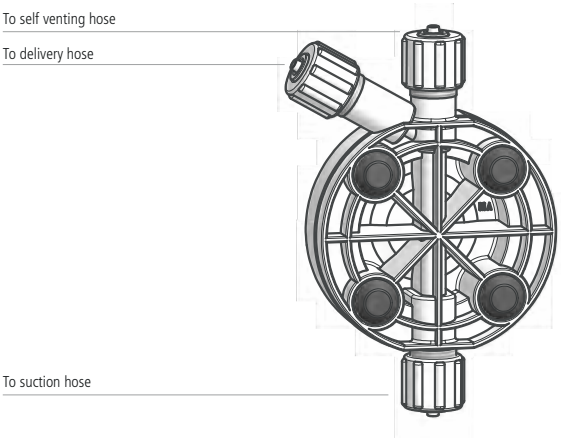


Fig. 10. Self-venting models pump head: SA, TA (AMSA PLUS).

ON "SA" AND "TA" MODELS THERE IS A RED THREADING NUT

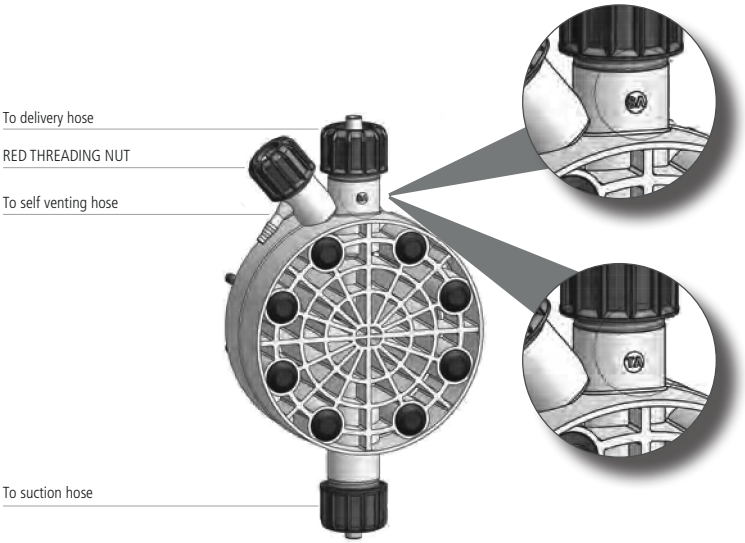

Suction, delivery and venting valve are different.

WIRING

Preliminary checks

⚠ THE ELECTRICAL WIRINGS SHOULD BE CARRIED OUT BY AUTHORIZED AND QUALIFIED PERSONNEL ONLY IN ACCORDANCE WITH LOCAL REGULATIONS.


Before to proceed, verify the following steps:

1. **Verify the data on nameplate.**
   Make sure that the electrical data on the nameplate of the motor corresponds to the electrical supply.

2. **Verify the grounded power outlet.**
   The pump must be plugged to a grounded power outlet. Pump must be connected to a motor protection switch (Residual Current Circuit Breaker - MCCB).

3. **Install a relay switch. Do not install it in parallel with heavy inductance load (for example: engines). See fig. 10.**

Fig. 11. Electrical installation.

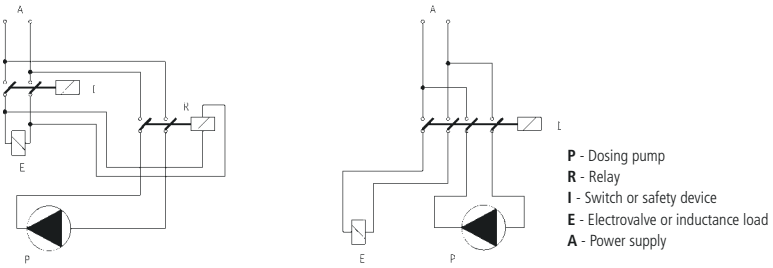

4. **Verify peak Amps. 115 or 230 VAC pumps do not use motor overload protection.**


Power supply	
12 VDC	connect the pump to a 55 Ah-12VDC battery
24 VDC	connect the pump to a 200W stabilized power supply (verify peak Amps)

5. **Verify level probe "BNC" is connected as described in "Foot filter / Level probe"..**

Pump's wiring

Connect external signal "BNC" to pump "INPUT".
This signal can be:
- water meter input
- mA signal input.

Fig. 12. Wirings

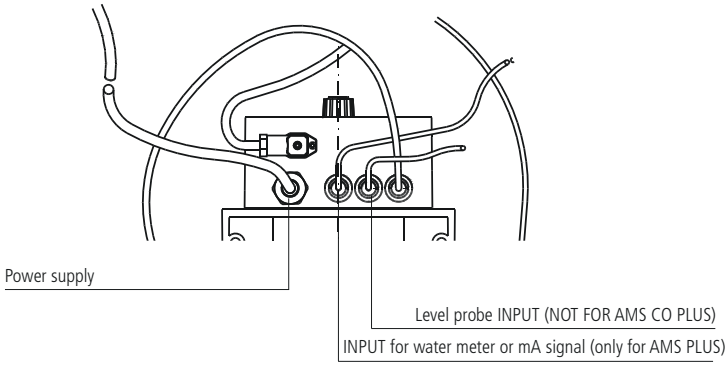

Level alarm output (option)

If present, connect level alarm (blue and brown wires).
Level alarm is free contact and not fuse protected output.
Max load relay output: 2A 250VAC.

PRIMING

Warnings

⚠ **Feeder should be interlocked with a no-flow protection device to automatically shut-off the pumps when there is no flow!**

⚠ **Adequate measures shall be taken to prevent cross connection of chemicals!**

⚠ **Chemical feeding must be stopped during backwash cycles and periods of noflow as these conditions may introduce the potential for chemical overdosing. Not doing so may result in elevated chemical concentrations and hazerdous gas introduction into the pool or spa.**

⚠ **Never operate any pumping system with a blocked suction and discharge. You must take all necessary measures to avoid this condition.**

⚠ **SAFETY EQUIPMENT**
Use safety equipment according to the company regulations. Use this safety equipment within the work area:
- **Helmet**
- **Safety goggles (with side shields)**
- **Protective shoes**
- **Protective gloves**
- **Gas mask**

Manual priming

To prime the pump (only in CONSTANT working mode):

1. perform al pipings (delivery, suction and venting hose);
2. turn completely the venting knob to open discharge valve;
3. set STROKE LENGTH KNOB on 100% (for viscous liquids set between 50 and 70%);
4. supply the pump.
5. When the product will start to flow into venting hose, close the discharge valve turning the knob (not for self-venting model).

For viscous liquids, to facilitate priming: insert a 20 cc syringe on venting pipe and suck;
When syringe is almost full close the discharge valve turning the knob..

Automatic priming

1. Turn OFF the pump.
2. Keep pressed OFF key for 4 seconds.
3. Pump primes for 30 seconds.

Turn ON the pump.

The pump returns to the last working mode.

CONTROL PANEL

AMS CO PLUS



AMS CL PLUS



AMS PLUS



Keyboard function



PROGRAMMING MODE ENTER/EXIT



ON/OFF - SCROLL PROGRAMS



STROKE LENGHT ADJUSTMENT KNOB (0-100%)



AMS PLUS
- STROKE FREQUENCY ADJUSTMENT (yellow labelled scale 0-100%) or
- DIVIDER MULTIPLIER FACTOR ADJUSTMENT N (grey labelled scale N: 1-10)

AMS CO PLUS / AMS CL PLUS
- STROKE FREQUENCY ADJUSTMENT (yellow labelled scale 0-100%) WITH CONSTANT 0-100% PROGRAM
- DIVIDER FACTOR ADJUSTMENT N (grey labelled scale N: 1-10) WITH CONSTANT 0-10% PROGRAM

Tab. 3. Keys functions

OPERATION	KEY
ON / OFF / AUTOMATIC PRIMING	ON/OFF - SCROLL
ENTER / EXIT from PROGRAMS MENU	P
CONFIRM PROGRAM	P
SCROLL PROGRAMS	ON/OFF - SCROLL





PROGRAMMS LED

Select a program to turn on the corresponding LED **Set the PROGRAM**.



LED LEVEL (NOT ON AMS CO PLUS)

Functions described in **Led LEVEL**.

LEVEL led

Red level led blinks in different ways described in the table

Tab. 4. Led LEVEL

LED	STATE	SOLUTION
Permanent red	Product end (if present a level probe) / tank empty	Fill the tank
3 blinks per second	Power supply is over the range (refer to pump label)	Check power supply correspond to pump label. Shutdown and restart.
2 blinks per second	Power supply is under the range (refer to pump label)	Check power supply correspond to pump label. Shutdown and restart.
1 blink per second	Pump is waiting program setting	Press scroll key and choose a program. Confirm with P key

PROGRAMS led

PROGRAMS led shows the current working program.
Press repeatedly SCROLL to select hte working program

Tab. 5. Led PROGRAMS

LED	STATE
Permanent on	Pump ON. Current pump working mode.
1 blink every 2 seconds on last working program.	Pump OFF..
All leds blinking together	Pump is waiting for programming. Press P and SCROLL to select the program or wait 30 seconds to exit without changing.

PROGRAMMING THE PUMP

Start/shutdown

Connet power supply cable and start the pump with ON/OFF key.
Led will be on the last program set (default setting:).
In OFF mode led will blink once every 2 seconds on the last program set (default setting:).

Set the PROGRAM

- Keep pressed P for 4 seconds.
- Leds blink together.
- Press P.
- Press SCROLL and choose a program.
- Press P to confirm. Led will be on the program set.

If you do not press any key, after 30 seconds pump will esc from programming mode.

PROGRAMS

Each program has its own led.

Tab. 6. Programs menu

PROGRAMS	WORKING MODE
mA [1]	proportional dosing mode based on mA current signal
CONSTANT	constant dosing mode
CONSTANT / DIVIDE	costant dosing mode with pulses divider (to reduce up to 10 times pump capacity)
MULT 1÷10 [1]	External pulses from a water meter are multiplied by a factor "N" from 1 to 10. Set "N" value turning DIVIDER MULTIPLIER FACTOR ADJUSTMENT KNOB (grey labelled scale N: 1-10).
DIV 1÷10 [1]	External pulses from a water meter are divided by a factor "N" from 1 to 10. Set "N" value turning DIVIDER MULTIPLIER FACTOR ADJUSTMENT KNOB (grey labelled scale N: 1-10).
DIV 10÷100 [1]	External pulses from a water meter are divided by a factor "N" from 10 to 100. Set "N" value turning DIVIDER MULTIPLIER FACTOR ADJUSTMENT KNOB (grey labelled scale N: 1-10). Grey labelled scela 1-10 is proportional to the range 10-100. Adjust the knob on maximum value (10) is equivalent to setting the scale on 100.
DIV 100÷1000 [1]	External pulses from a water meter are divided by a factor "N" from 100 to 1000. Set "N" value turning DIVIDER MULTIPLIER FACTOR ADJUSTMENT KNOB (grey labelled scale N: 1-10). Grey labelled scale 1-10 is proportional to the range 10-100. Adjust the knob on maximum value (10) is equivalent to setting the scale on 1000.

[1] Not available on AMS CO PLUS and AMS CL PLUS models.

mA mode

Current from an external device (BNC input) drives the pump that doses proportionally according to the minimum and maximum set (0-20 mA or 4-20 mA).

To set press SCROLL until mA led turn on (red for 0-20 mA; green for 4-20 mA) and confirm with P key.

To choose if...	... there is a mA current signal (controllers provided with proportional output in current), and you have to dose a certain amount of product.

STROKE LENGHT ADJUSTMENT KNOB (0-100%) acts percentually on pump capacity.

STROKE FREQUENCY ADJUSTMENT (yellow labelled scale 0-100%) acts on injection per minutes.

CONSTANT mode

Pump doses at a constant rate set with stroke length adjustment knob.

To set press SCROLL until CONSTANT led turn on and confirm with P key.

To choose if...	... there is not an external signal, and you have to dose a certain amount of product regularly.

STROKE LENGHT ADJUSTMENT KNOB (0-100%) acts percentually on pump capacity.

STROKE FREQUENCY ADJUSTMENT (yellow labelled scale 0-100%) acts on injection per minutes.

CONSTANT with divider mode

Pump doses at a constant rate set with stroke length adjustment knob but this rate is divided by a factor up to 10.

To set press SCROLL until CONSTANT and DIV 1÷10 led turn on together, then confirm with P key.

To choose if...	... there is not an external signal, and you have to dose a certain amount of product regularly but pump capacity is too high

STROKE LENGHT ADJUSTMENT KNOB (0-100%) acts percentually on pump capacity.

DIVIDER FACTOR ADJUSTMENT KNOB (grey labelled scale 1-10%) set the divider factor 1-10 to reduce pump capacity.

MULT 1÷10 mode

External pulses are multiplied by a value set by MULTIPLIER FACTOR ADJUSTMENT KNOB.

To set press SCROLL until MULT 1÷10 led turn on, then confirm with P key.

To choose if...	... an external signal produces low pulses number. This working mode multiplies pulses from 1 to 10 to dose the correct product amount.

STROKE LENGHT ADJUSTMENT KNOB (0-100%) acts percentually on pump capacity.

MULTIPLIER FACTOR ADJUSTMENT KNOB (grey labelled scale 1-10) set the multiplier factor 1-10 to increase pump capacity.

DIV 1÷10
DIV 10÷100
DIV 100÷1000 mode

External pulses are multiplied by a value set by DIVIDER FACTOR ADJUSTMENT KNOB.

To set press SCROLL until DIV 1÷10 or DIV 10÷100 or DIV 100÷1000 led turn on, then confirm with P key.

To choose if...	... an external signal produces high pulses number. This working mode divides pulses to dose the correct product amount.

STROKE LENGHT ADJUSTMENT KNOB (0-100%) acts percentually on pump capacity.

DIVIDER FACTOR ADJUSTMENT KNOB (grey labelled scale 1-10) set the divider factor to reduce pump capacity:

- from 1 to 10 if in **DIV 1÷10 mode**
- from 10 to 100 if in **DIV 10÷100 mode**
- from 100 to 1000 if in **DIV 100÷1000 mode**

Calculate the N factor

Use the formula:

$$\frac{[imp/l] \times [cc]}{[ppm] \times [K]} \times 1000 = N$$

N value to set with FACTOR ADJUSTMENT KNOB
[imp/l] pulses/litre from pulse emitter water meter
[cc] single injection product amount of dosing pump (cubic centimetres)
[ppm] part per million product amount (gr/m^3)
[K] product diluition coefficient.

Depending on N set working mode:

Result	Working mode
N>1	**DIV 1÷10 or DIV 10÷100 or DIV 100÷1000**
N<1	**Calculate 1/N then set the resul in MULT 1÷10**
N=1	**DIV 1÷10 or DIV 10÷100 or DIV 100÷1000 or MULT 1÷10**

TROUBLESHOOTING

Tab. 7. Guide to troubleshooting

PROBLEM	CAUSE	REMEDY
Pump does not start	• Pump not powered • Protection fuse • Main board	• Connect to main voltage • Replace fuse **Fuse replacement procedure**. • Replace main board **Main board replacement procedure**.
Pump does not feed but solenoid runs	• Foot filter obstruction • Pump head empty (suction pipe empty) • Air bubbles into pump head or into suction pipe • Product generates gas	• Clean the foot filter • Prime the pump **PRIMING** • Check valves, pipes and fittings • Open venting knob and let air flow out. Use a self-venting pump head.
Pump does not feed, solenoid does not run or slightly run	• Valves and/or ball valves blocked • Injection valve obstruction	• Clean valves and ball valve. Feed 2-3 litres of water to wash valves and pump head • Change valves

If the problem can not be solved, please contac after-sales service or return the dosing pump to the manufacturer.

Repair service

Before return the dosing pump to the manufacturer Repair service, drain the chemical from pump head and rinse it. Refer to Shutdown procedure.
If there is the possibility that residual corrosive liquid into pump head could cause damages, declare it on REPAIR FORM.

Fill the PRODUCT SERVICE REPAIR FORM and send it with the dosing pump.
Repair service is not accepted if PRODUCT SERVICE REPAIR FORM is missing.

Fuse replacement procedure

⚠ Make sure that the product is isolated from the power supply and cannot be powered by mistake.

⚠ This procedure SHOULD BE CARRIED OUT BY AUTHORIZED AND QUALIFIED PERSONNEL

In order to replace fuse, you need these tools:i:
- a 3x16 screwdriver
- a 3x15 screwdriver
- fuse (see **Features**)

- Unplug power supply and pipings.
- Turn STROKE LENGHT ADJUSTMENT KNOB on 0%.
- Remove screws on the back of the pump.
- Pull back cover until it's completed separated from pump's front. Be careful of the knob's spring.
- Locate the fuse and replace with a new one.
- Reassemble the pump. Be careful to put back the knob's spring.
- Reinsert screws

Main board replacement procedure

⚠ Make sure that the product is isolated from the power supply and cannot be powered by mistake.

⚠ This procedure SHOULD BE CARRIED OUT BY AUTHORIZED AND QUALIFIED PERSONNEL

In order to replace main board, you need these tools:i:
- a 3x16 screwdriver
- a 3x15 screwdriver
- new main board

- Unplug power supply and pipings.
- Turn STROKE LENGHT ADJUSTMENT KNOB on 0%.
- Remove screws on the back of the pump.
- Pull back cover until it's completed separated from pump's front. Be careful of the knob's spring.
- Remove boards screws..
- Completely disconnect wires from main board and replace it. Reinsert screws.
- Reconnect wires to the main board (Main board scheme).
- Reassemble the pump. Be careful to put back the knob's spring.
- Reinsert screws.

Main board

Fig. 13. Main board scheme


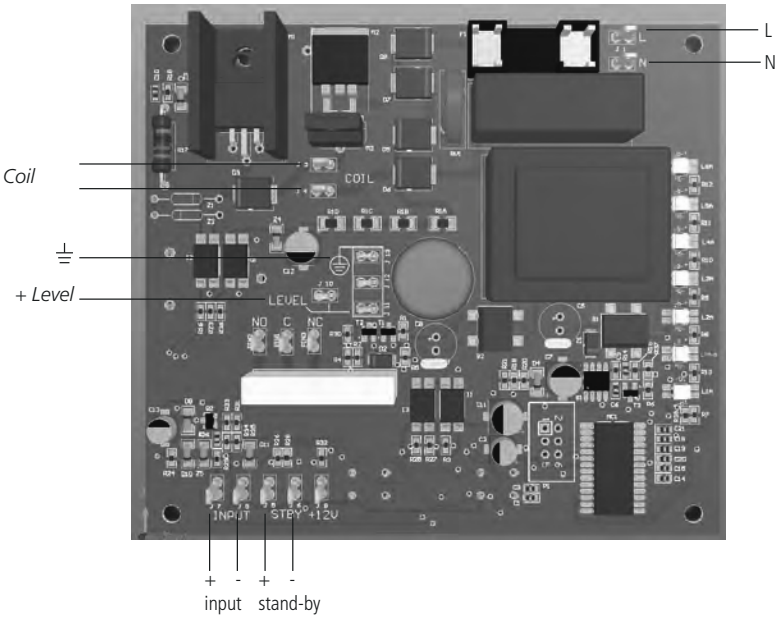


Fig. 14. AMS PLUS 12 VDC

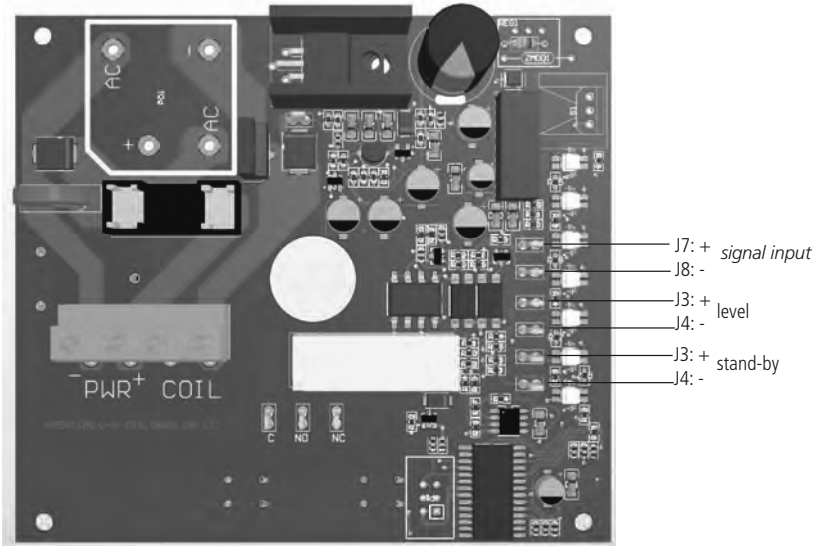

MAINTENANCE

Maintenance schedule

In order to ensure the requirements of potable drinking water treated and the maintenance of the improvements as declared by the manufacturer, this equipment must be checked at least once a month.

OPERATOR PROTECTION

Use safety equipment according to the company regulations.
Use this safety equipment within the work area during installation, service and when handling chemicals:

- **protective mask**
- **protective gloves**
- **safety goggles**
- **ear plugs or hear muffs**
- **further security device, if necessary.**

POWER SUPPLY DISCONNECTION

Always disconnect power to the motor before you perform any installation or maintenance tasks. Failure to disconnect power will result in serious physical injury.

Installation and maintenance tasks should be carried out by AUTHORIZED AND QUALIFIED PERSONNEL only in accordance with local regulations.

Use original spare parts.

Maintenance inspection

Shutdown the dosing pump before any maintenance operation **Shutdown procedure.**

A maintenance schedule includes these types of inspections:

- Routine maintenance and inspections
- Three-month inspections
- Annual inspections

Shorten the inspection intervals appropriately if the pumped chemical is abrasive or corrosive.

Routine maitenance and inspections

Perform these tasks whenever you perform routine maintenance:

- Inspect the seal. Ensure that there are no leaks from the mechanical seal.
- Check electrical wiring
- Check for unusual noise and vibration (noise allowed 71 dbA; ± 5 dB).
- Check the pump and piping for leaks.
- Check for corrosion on parts of the pump and / or on hoses.

Three-month inspections

Perform these tasks every three months:

- Check that the tightenings.
- Check the mechanical seal if the pump has been left idle.

Annual inspections

Perform these inspections one time each year:

- Check the pump capacity (as per nameplate).
- Check the pump pressure (as per nameplate).
- Check the pump power (as per nameplate).

f the pump performance does not satisfy your process requirements, and the process requirements have not changed, then perform these steps:
1. Disassemble the pump.
2. Inspect it.
3. Replace worn parts.

Shutdown procedure

⚠ **This procedure SHOULD BE CARRIED OUT BY AUTHORIZED AND QUALIFIED PERSONNEL**

⚠ **OPERATOR PROTECTION**
Use safety equipment according to the company regulations.
Use this safety equipment within the work area during installation, service and when handling chemicals:
- **protective mask**
- **protective gloves**
- **safety goggles**
- **ear plugs or hear muffs**
- **further security device, if necessary.**

Shutdown the dosing pump **before any maintenance operation** or **before long downtimes**. Disconnect power and ensure it cannot be restarted.

⚠ **Depressurize the system. The liquid may leak splashing.**


Drain the chemical from pump head.
Release the pressure and disconnect the disharge pipe from the discharge valve.
Rinse the pump head and clean all valves.

Delivery curves


Flow rate indicated is for H_2O at 20°C at the rated pressure.
Dosing accuracy ± 2% at constant pressure ± 0,5 bar.

Fig. 14. AMS PLUS delivery curves

2505: l/h 05 bar 25
Corpo pompa / Pump head mod. L

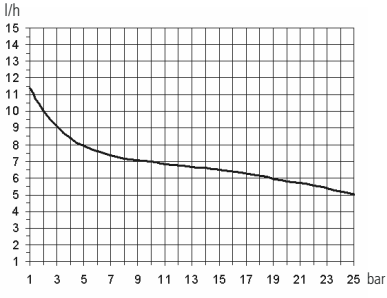


1510: l/h 10 bar 15
Corpo pompa / Pump head mod. M

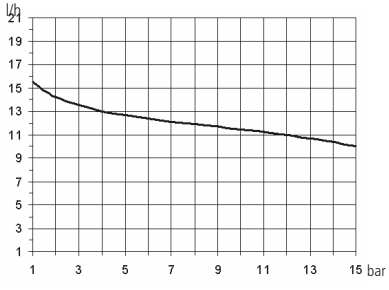


1015: l/h 15 bar 10
Corpo pompa / Pump head mod. M



0720: l/h 20 bar 7
Corpo pompa / Pump head mod. N

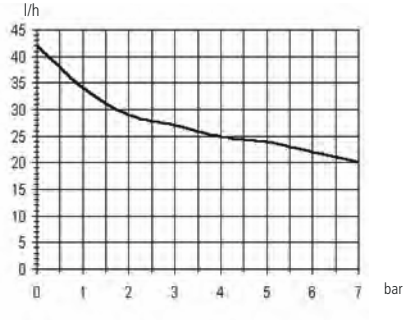

0340: l/h 40 bar 3
Corpo pompa / Pump head mod. S

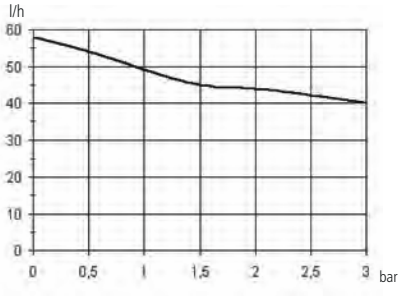

0260: l/h 60 bar 2
Corpo pompa / Pump head mod. T



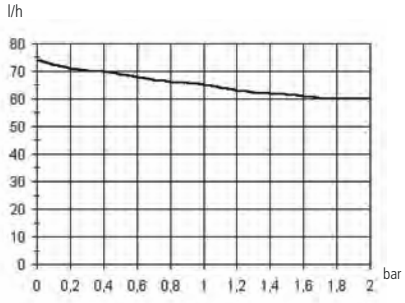


Fig. 15. AMSA PLUS delivery curves


253,2: l/h 25 bar 3,2
Corpo pompa / Pump head mod. LA

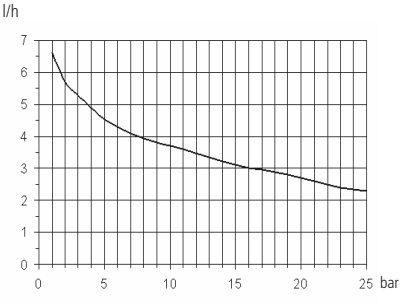


1506: l/h 6 bar 15
Corpo pompa / Pump head mod. MA

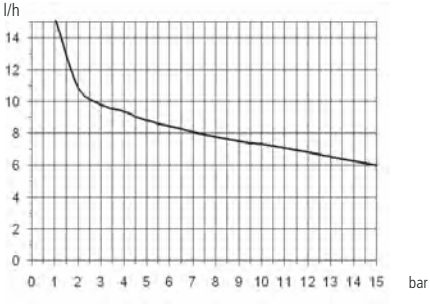


0713: l/h 13 bar 7
Corpo pompa / Pump head mod. NA

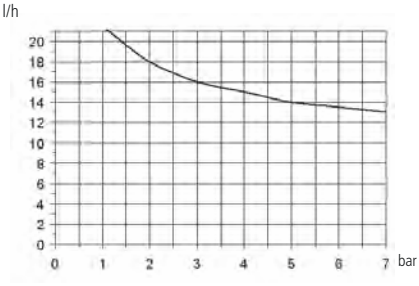

1010: l/h 10 bar 10
Corpo pompa / Pump head mod. MA

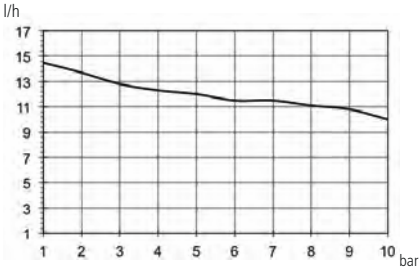

0330: l/h 30 bar 3
Corpo pompa / Pump head mod. SA

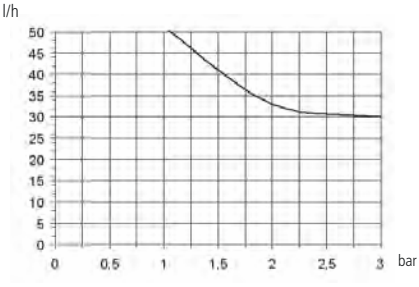

0238,5: l/h 38,5 bar 2
Corpo pompa / Pump head mod. TA



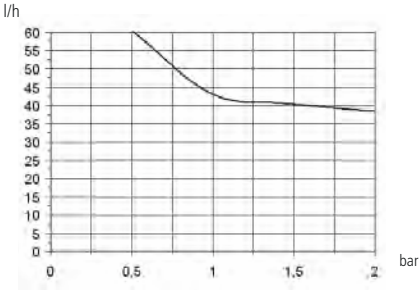


Fig. 16. AMS AC PLUS delivery curves

05180: l/h 180 bar 5
Pump head mod. T

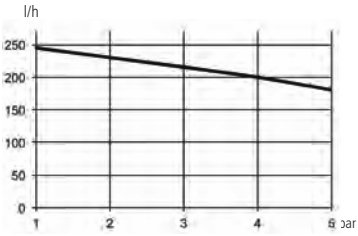

00260: l/h 260 bar 0
Pump head mod. T

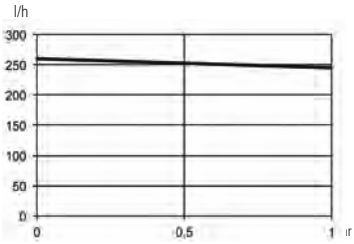

1050: l/h 50 bar 10
Pump head mod. N

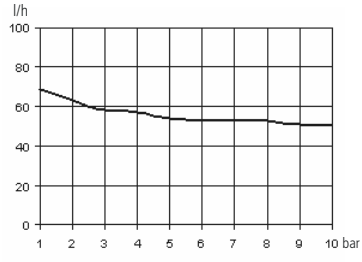


Fig. 17. Dimensions with pump head mod. N or P



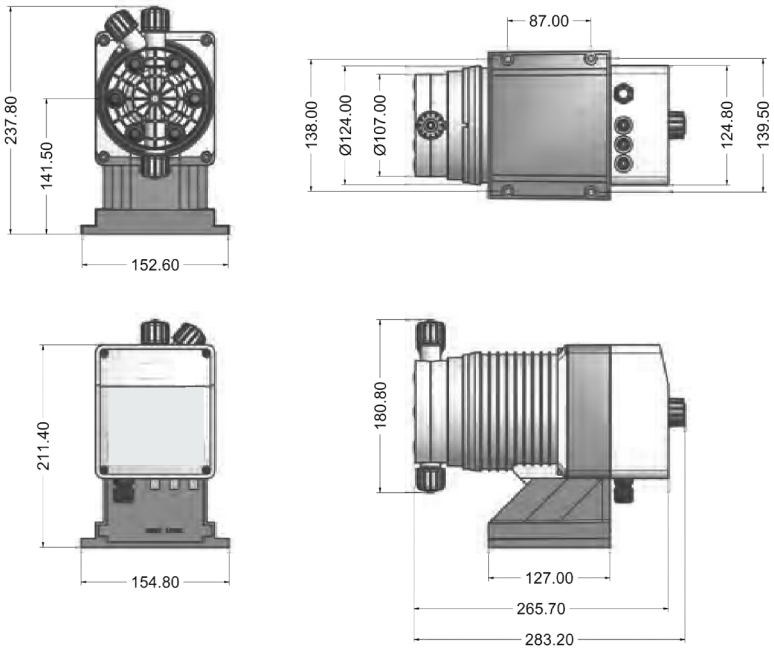


Fig. 18. Dimensions with pump head mod. S or T

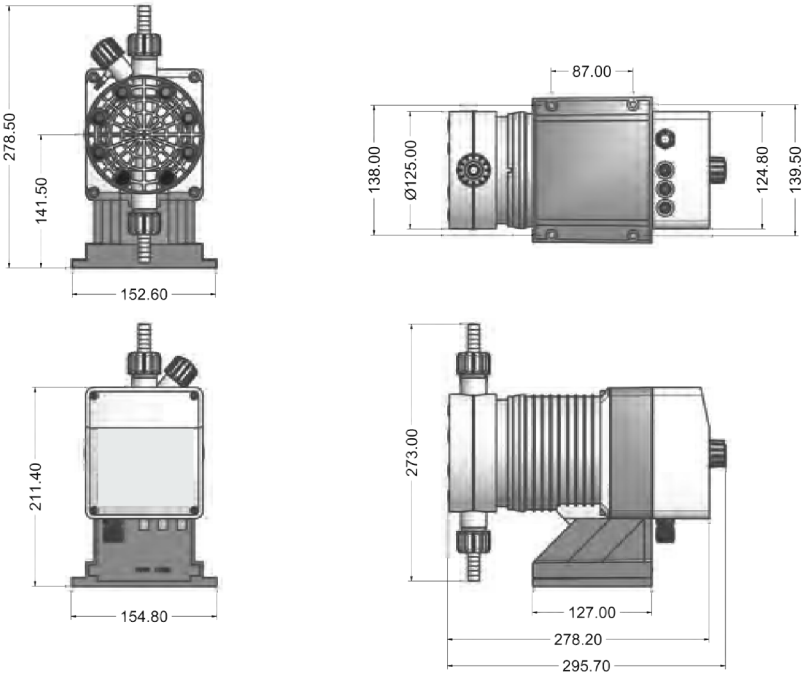

Exploded view Specify the pump's label when ordering spare parts.

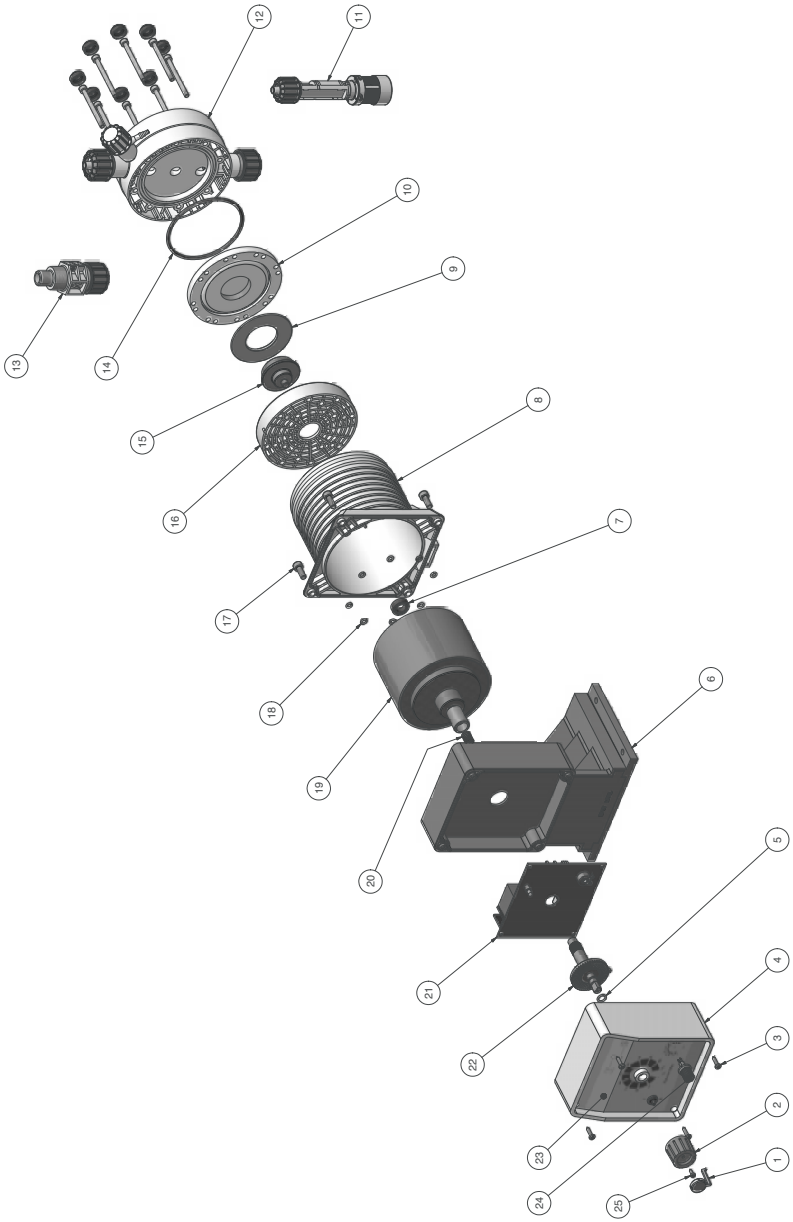

COMPATIBILITY TABLE

Chemical compatibility table

Solenoid driven metering pumps are widely used to dose chemical fluids and it is important that the most suitable material in contact with fluid is selected for each application. This compatibility table serves as a useful help in this respect. All the informations in this list are verified periodically and believed to be correct on the date of issuance. All the informations in this list are based on manufacturer's data and its own experience but since the resistance of any material depends by several factors this list is supplied only as an initial guide, in no way manufacturer makes warranties of any matter respect to the informations provided in this list.

Tab. 8. Chemical compatibility table.

Product	Formula	Ceram.	PVDF	PP	PVC	SS 316	PMMA	Hastel.	PTFE	FPM	EPDM	NBR	PE
Acetic Acid, Max 75%	CH3COOH	2	1	1	1	1	3	1	1	3	1	3	1
Hydrochloric Acid, Concentrate	HCl	1	1	1	1	3	1	1	1	1	3	3	1
Hydrofluoric Acid 40%	H2F2	3	1	3	2	3	3	2	1	1	3	3	1
Phosphoric Acid, 50%	H3PO4	1	1	1	1	2	1	1	1	1	1	3	1
Nitric Acid, 65%	HNO3	1	1	2	3	2	3	1	1	1	3	3	2
Sulphuric Acid, 85%	H2SO4	1	1	1	1	2	3	1	1	1	3	3	1
Sulphuric Acid, 98.5%	H2SO4	1	1	3	3	3	3	1	1	1	3	3	3
Amines	R-NH2	1	2	1	3	1	-	1	1	3	3	1	1
Sodium Bisulphite	NaHSO3	1	1	1	1	2	1	1	1	1	1	1	1
Sodium Carbonate (Soda)	Na2CO3	2	1	1	1	1	1	1	1	2	1	1	1
Ferric Chloride	FeCl3	1	1	1	1	3	1	1	1	1	1	1	1
Calcium Hydroxide (Slaked Lime)	Ca(OH)2	1	1	1	1	1	1	1	1	1	1	1	1
Sodium Hydroxide (Caustic Soda)	NaOH	2	3	1	1	1	1	1	1	2	1	2	1
[1] Calcium Hypochlor.(Chlor. ted Lime)	Ca(OCl)2	1	1	1	1	3	1	1	1	1	1	3	1
Sodium Hypochlorite, 12.5%	NaOCl + NaCl	1	1	2	1	3	1	1	1	1	1	2	3
Potassium Permanganate, 10%	KMnO4	1	1	1	1	1	1	1	1	1	1	3	1
Hydrogen Peroxide, 30% (Perydrol)	H2O2	1	1	1	1	1	3	1	1	1	3	3	1
Aluminium Sulphate	Al2(SO4)3	1	1	1	1	1	1	1	1	1	1	1	1
Copper-II-Sulphate (Roman Vitriol)	CuSO4	1	1	1	1	1	1	1	1	1	1	1	1

[1] Calcium Hypochlor.(Chlor.ted Lime): WQA test was based on 1% Calcium Hypochlorite solution.

1 - Good resistance rating
2 - Fairly resistance rating
3- Not resistant

Materials

Polyvinyldene fluoride (PVDF) .....Pump heads, Valves, Fittings
Polypropylene (PP).....Pump heads, Valves, Fittings
PVC .....Pump heads
Stainless steel (SS 316).....Pump heads, Valves
Polymethyl Metacrilate Acrylic (PMMA) ...Pump heads
Polytetrafluoroethylene (PTFE) .....Diaphragm
Fluorocarbon (FPM).....O-ring
Ethylene propylene (EPDM).....O-ring
Nitrile (NBR).....O-ring

Hose resistance table

Hose features are very important for a reliable dosage. Every pump's model is made to work in the best way using selected hoses according to pump's capacity / model. Information reported here are intended for standard use only. For extended information ask to hose's manufacturer.

Tab. 9. Hoses features

Suction / Delivery Hose			
4x6 mm PVC (transparent)	4x8 mm PE (opaque)	6x8 mm PE (opaque)	8x12 mm PVC (transparent)

Delivery Hose	Working Pressure				Breaking Pressure			
4x6 mm PE 230 (opaque)	20°C 12 bar	30°C 10.5 bar	40°C 8.5 bar	50°C 6.2 bar	20°C 36 bar	30°C 31.5 bar	40°C 25.5 bar	50°C 18.5 bar
4x8 mm PE 230 (opaque)	20°C 19 bar	30°C 15.7 bar	40°C 12 bar	50°C 7.5 bar	20°C 57 bar	30°C 47 bar	40°C 36 bar	50°C 22.5 bar
6x8 mm PE 230 (opaque)	20°C 8.6 bar	30°C 6.8 bar	40°C 4.8 bar	50°C 2.3 bar	20°C 26 bar	30°C 20.5 bar	40°C 14.5 bar	50°C 7 bar
8x12 mm PE 230 (opaque)	20°C 12 bar	30°C 10.5 bar	40°C 8.5 bar	50°C 6.2 bar	20°C 36 bar	30°C 31.5 bar	40°C 25.5 bar	50°C 18.5 bar

4x6 mm PVDF Flex 2800 (opaque)	20°C 40 bar	30°C 34 bar	40°C 30 bar	50°C 27 bar	60°C 24.8 bar	80°C 20 bar	90°C 10 bar
6x8 mm PVDF Flex 2800 (opaque)	20°C 29 bar	30°C 25.5 bar	40°C 22 bar	50°C 20 bar	60°C 18 bar	80°C 14.5 bar	90°C 7.3 bar
8X10 mm PVDF Flex 2800 (opaque)	20°C 18 bar	30°C 15.5 bar	40°C 13.5 bar	50°C 12.5 bar	60°C 11.2 bar	80°C 9 bar	90°C 4.5 bar

1/4 PE 230 (opaque)	20°C 17.6 bar
3/8 PE 230 (opaque)	20°C 10.6 bar
1/2 PE 230 (opaque)	20°C 10.6 bar

PRODUCT SERVICE REPAIR FORM

ENCLOSE THE PRESENT FORM TO THE DELIVERY NOTE

DATE .....

SENDER

Company name.....

Address .....

Phone no. .....

Contact person.....

PRODUCT TYPE (see product label)

DEVICE CODE .....

S/N (serial number).....

OPERATING CONDITIONS

Location/installation description .....

.....

Chemical .....

Start-up (date) ..... Running time (approx. hours).....

REMOVE ALL THE LIQUID INTO THE PUMP HEAD AND DRY IT BEFORE PACKAGING IN ITS ORIGINAL BOX.

DESCRIPTION OF PROBLEM

☐ MECHANICAL

- Wear parts.....
- Brekage/other damages .....
- Corrosion.....
- Other.....

☐ ELECTRICAL

- Connections, connector, cables .....
- Operating controls (keyboard, display, etc.) .....
- Elettronics.....
- Other.....

☐ LEAKS

- Connections.....
- Pump head .....

☐ NOT OR INADEQUATE FUNCTION/OTHER

.....

.....

.....

I declare that the dosing pump is free of any hazardous chemical.

Signature of the compiler

Company stamp

TABLE OF CONTENTS

GENERAL SAFETY GUIDELINES 2
PURPOSE OF USE AND SAFETY 3
ENVIRONMENTAL SAFETY 4
LABEL 4
SPARE PARTS 4
Included into package 5
DESCRIPTION 6
AMS PLUS 6
AMS CO PLUS 6
AMS CL PLUS 6
Self venting: AMSA PLUS 6
Features 8
Manual stroke length adjustment 9
Materials 9
INSTALLATION 10
How to install metering pump 10
User health and safety 10
The work area 10
Pump location 10
Requirements for product positioning 10
PIPING CONNECTIONS 12
Foot filter / Level probe 12
(included only in some models) 12
Suction hose connection 13
Pump head / delivery hose assembling procedure 13
Injection valve 14
Venting hose 14
AMSA PLUS self venting pump head connection 15
WIRING 16
Preliminary checks 16
Pump's wiring 17
Level alarm output (option) 17
PRIMING 18
Warnings 18
Manual priming 18
Automatic priming 18
CONTROL PANEL 19
Keyboard function 19
AMS CO PLUS 19
AMS CL PLUS 19
AMS PLUS 19
LEVEL led 20
PROGRAMS led 20
PROGRAMMING THE PUMP 21
Start/shutdown 21
Set the PROGRAM 21
PROGRAMS 21
mA mode 22
CONSTANT mode 22
CONSTANT with divider mode 22
MULT 1÷10 mode 23
DIV 1÷10 DIV 10÷100 DIV 100÷1000 mode . 23
Calculate the N factor 23
TROUBLESHOOTING 24
Repair service 24
Fuse replacement procedure 25
Main board replacement procedure 25
Main board 26
MAINTENANCE 27
Maintenance schedule 27
Maintenance inspection 27
Shutdown procedure 28
Delivery curves 29
Dimensions 32
Exploded view 33
COMPATIBILITY TABLE 34
Chemical compatibility table 34
Materials 34
Hose resistance table 35
TABLE OF CONTENTS 38

Indice delle figure

Fig. 1. Product label. 4
Fig. 2. WQA label 4
Fig. 3. AMS PLUS - AMSA PLUS 7
Fig. 4. Installation 11
Fig. 5. Level probe assembling diagram. 12
Fig. 6. Suction hose assembling 13
Fig. 7. Delivery hose / pump head assembling 13
Fig. 8. Manual venting pump head model (AMS PLUS) 14
Fig. 9. Self-venting models pump head: LA, MA, NA (AMSA PLUS). 15
Fig. 10. Self-venting models pump head: SA, TA (AMSA PLUS). .. 15
Fig. 11. Electrical installation. 16
Fig. 12. Wirings 17
Fig. 13. Main board scheme 26
Fig. 14. AMS PLUS delivery curves 29
Fig. 15. AMSA PLUS delivery curves 30
Fig. 17. Dimensions with pump head mod. S or T 32
Fig. 16. Dimensions with pump head mod. N or P 32

Indice delle tabelle

Tab. 1. Capacity (manual and self venting models) 8
Tab. 2. Keys functions 19
Tab. 3. Led LEVEL 20
Tab. 4. Led PROGRAMS 20
Tab. 5. Programs menu 21
Tab. 6. Guide to troubleshooting 24
Tab. 7. Chemical compatibility table. 34
Tab. 8. Hoses features 35

PRECAUTIONS RELATING TO DIRECTIVES, REGULATIONS AND STANDARDS

§ CE/EU and UKCA marking

EMEC S.r.l. guarantees that this product meets the essential requirements of the applicable Directives and Regulations based on the following specifications. Please carefully consider the following specifications for use of the product in European Union member countries and the United Kingdom.

• CE/EU harmonized directives and standards

Directives
DIRECTIVE 2006/42/EC
DIRECTIVE 2014/35/EU
DIRECTIVE 2014/30/EU
DIRECTIVE 2011/65/EU
DELEGATED DIRECTIVE (EU) 2015/863

Harmonized standards
EN ISO 12100
EN 809
EN ISO 20361
EN IEC 61326-1
EN 61010-1
EN IEC 63000

• UKCA harmonized regulations and standards

Regulations
2008 No. 1597
2008 2016 No. 1091
2016 No. 1101
2012 No. 3032

Harmonized standards
BS EN ISO 12100
BS EN 809
BS EN ISO 20361
BS EN IEC 61326-1
BS EN 61010-1
BS EN IEC 63000

§ Other compliances

Decree 6 April 2004, n. 174 of the Ministry of Health (Gazzetta Ufficiale n. 166 of 17-7-2004)
Decree 7 February 2012, n.25 of the Ministry of Health (Gazzetta Ufficiale n. 166 of 17-7-2004)

EC/EU declaration of conformity model

emec
SIMPLE AS WATER

DICHIARAZIONE DI CONFORMITA' CE
DECLARATION OF CONFORMITY EC

La Società
The Company
EMEC S.r.l.

Indirizzo della Società
Company Address
Via Donatori di Sangue, 1
02100 Rieti (RI) - Italia

DICHIARA, sotto la propria responsabilità che il prodotto:
***DECLARES**, under it own responsibility, that the product:*

Descrizione Prodotto
Product Description
Pompa dosatrice elettromagnetiche, serie AMS
Electromagnetic dosing pump, AMS series

Codici Identificativi Prodotto
(i simboli "_" completano il codice del prodotto in base alla configurazione delle varianti)
Product Identification Codes
(the "_" symbols complete the product code based on the configuration of the variants)

AMF _____	AAF _____	AMC _____
APH _____	AAA _____	ALA _____
ARH _____	AAR _____	AOA _____
AMU _____	AAU _____	
ACP _____	AAL _____	
AUO _____	AAC _____	

Numero di Serie
Serial Number
Si veda l'etichetta sul prodotto
See the label on the product

È conforme a quanto previsto dalle seguenti direttive comunitarie:
It complies with the provisions of the following community directives:

- **DIRETTIVA 2006/42/CE DEL PARLAMENTO EUROPEO E DEL CONSIGLIO** del 17 maggio 2006 relativa alle macchine e che modifica la direttiva 95/16/CE;
  ***DIRECTIVE 2006/42/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 17 May 2006 relating to machinery and amending Directive 95/16/EC;*
- **DIRETTIVA 2014/35/UE DEL PARLAMENTO EUROPEO E DEL CONSIGLIO** del 26 febbraio 2014 concernente l'armonizzazione delle legislazioni degli Stati membri relative alla messa a disposizione sul mercato del materiale elettrico destinato a essere adoperato entro taluni limiti di tensione **(LVD)**;
  ***DIRECTIVE 2014/35/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 26 February 2014 concerning the harmonization of the laws of the Member States relating to the making available on the market of electrical equipment intended for use within certain voltage limits (LVD);*
- **DIRETTIVA 2014/30/UE DEL PARLAMENTO EUROPEO E DEL CONSIGLIO** del 26 febbraio 2014 concernente l'armonizzazione delle legislazioni degli Stati membri relative alla compatibilità elettromagnetica **(EMC)**;
  ***DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 26 February 2014 concerning the harmonization of the laws of the Member States relating to electromagnetic compatibility (EMC);*
- **DIRETTIVA 2011/65/UE DEL PARLAMENTO EUROPEO E DEL CONSIGLIO** dell'8 giugno 2011 sulla restrizione dell'uso di determinate sostanze pericolose nelle apparecchiature elettriche ed elettroniche **(RoHS)**;
  ***DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL** of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS);*
- **DIRETTIVA DELEGATA (UE) 2015/863 DELLA COMMISSIONE** del 31 marzo 2015 recante modifica dell'allegato II della direttiva 2011/65/UE del Parlamento europeo e del Consiglio per quanto riguarda l'elenco delle sostanze con restrizioni d'uso **(RoHS 3)**;
  ***COMMISSION DELEGATED DIRECTIVE (EU) 2015/863** of 31 March 2015 amending Annex II to Directive 2011/65/EU of the European Parliament and of the Council as regards the list of substances with restricted use (RoHS 3);*

Autorizza:
Authorizes:
Ing. Fabio Farina
Via Donatori di Sangue, 1 – 02100 Rieti (RI) - Italia – EMEC S.r.l.
A costituire il fascicolo tecnico per suo conto (punto 2, allegato II, Direttiva 2006/42/CE)
To compile the technical file on its behalf (point 2, annex II, Directive 2006/42/EC)

Data
Date
18/12/2024

Firma del fabbricante
Manufacturer's signature

emec
SIMPLE AS WATER
Via Donatori di sangue, 1 02100 Rieti - P.IVA e C.F. 00620840579
Cittadini Fabrizio - Presidente del C.D. - EMEC S.r.l.

EMEC S.r.l.
Via Donatori di Sangue, 1
02100 Rieti (RI) – Italia
T +39 0746 22841
F +39 0746 22842
info@emecpumps.com – www.emecpumps.com

Sede legale
Corso Vittorio Emanuele II, 15
20122 Milano (MI) – Italia
Codice SDI: KRRH6B9
P.IVA e Cod. Fisc.: 00620840579
Registro imprese Milano REA MI - 2050351

UKCA declaration of conformity model

DECLARATION OF CONFORMITY
DICHIARAZIONE DI CONFORMITA'
In accordance with UK Government guidance
In conformità con le linee guida del governo del Regno Unito

The Company *La Società*	**EMEC S.r.l.**
Company Address *Indirizzo della Società*	**Via Donatori di Sangue, 1** **02100 Rieti (RI) - Italia**

This declaration is issued under the sole responsibility of the manufacturer
La presente dichiarazione è rilasciata sotto la sola responsabilità del produttore

Product Description *Descrizione Prodotto*	Electromagnetic dosing pump, AMS series *Pompa dosatrice elettromagnetiche, serie AMS*
Product Identification Codes (the "_" symbols complete the product code based on the configuration of the variants) *Codici Identificativi Prodotto* *(i simboli "_" completano il codice del prodotto in base alla configurazione delle varianti)*	**AMF** _____ **AAF** _____ **AMC** _____ **APH** _____ **AAA** _____ **ALA** _____ **ARH** _____ **AAR** _____ **AOA** _____ **AMU** _____ **AAU** _____ **ACP** _____ **AAL** _____ **AUO** _____ **AAC** _____
Serial Number *Numero Seriale*	See the label on the product *Si veda l'etichetta sul prodotto*

The object of the declaration described above is in conformity with the relevant UK Statutory Instruments (and their amendments):
L'oggetto della dichiarazione sopra descritta è conforme ai pertinenti strumenti normativi del Regno Unito (e ai loro emendamenti):

2008 No. 1597	**The Supply of Machinery (Safety) Regulations** *Regolamento sulla sicurezza della fornitura di macchine del 2008*
2008 2016 No. 1091	**The Electromagnetic Compatibility Regulations 2016** *Regolamento sulla compatibilità elettromagnetica del 2016*
2016 No. 1101	**The Electrical Equipment (Safety) Regulations 2016** *Regolamento sull'equipaggiamento elettrico (Sicurezza) del 2016*
2012 No. 3032	**The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012** *Regolamento sulla restrizione dell'uso di determinate sostanze pericolose nelle apparecchiature elettriche ed elettroniche del 2012*

UKCA declaration of conformity model

DECLARATION OF CONFORMITY
DICHIARAZIONE DI CONFORMITA'
In accordance with UK Government guidance
In conformità con le linee guida del governo del Regno Unito

and complies with the following technical standards:
ed è conforme alle seguenti norme tecniche:

BS EN ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
BS EN 809:1998+A1:2009/AC:2010	Pumps and pump units for liquids - Common safety requirements
BS EN ISO 20361:2019+A11:2020	Liquid pumps and pumps units - Noise test code - Grades 2 and 3 of accuracy (ISO 20361:2019)
BS EN IEC 61326-1:2021	Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements
BS EN 61010-1:2010+A1:2019	Safety requirements for electrical equipment for measurement, control, and laboratory use – Part 1: General requirements
BS EN IEC 63000:2018	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Authorizes:
Autorizza:
Ing. Fabio Farina
Via Donatori di Sangue, 1 – 02100 Rieti (RI) - Italia – EMEC S.r.l.
To compile the technical file on its behalf (point 2, PART 2, The Supply of Machinery (Safety) Regulations 2008)
A costituire il fascicolo tecnico per suo conto (punto 2, PARTE 2, Regolamento sulla sicurezza della fornitura di macchine del 2008)

Signed for and on behalf of EMEC
Firmato per conto e a nome di EMEC

Date 18/12/2024

Ciogli Claudio

EMEC S.r.l.
Via Donatori di Sangue, 1
02100 Rieti (RI) – Italia
T +39 0746 22841
F +39 0746 22842
info@emecpumps.com – www.emecpumps.com

Sede legale
Corso Vittorio Emanuele II, 15
20122 Milano (MI) – Italia
Codice SDI: KRRH6B9
P.IVA e Cod. Fisc.: 00620840579
Registro imprese Milano REA MI - 2050351



Disposal of end-of-life equipment by users

This symbol warns you not to dispose of the product with normal waste. Respect human health and the environment by giving the discarded equipment to a designated collection center for the recycling of electronic and electrical equipment. For more information visit the online site.



When dismantling a pump please separate material types and send them according to local recycling disposal requirements. We appreciate your efforts in supporting your local Recycle Environmental Program. Working together we'll form an active union to assure the world's invaluable resources are conserved.